


Control Panel & Heating

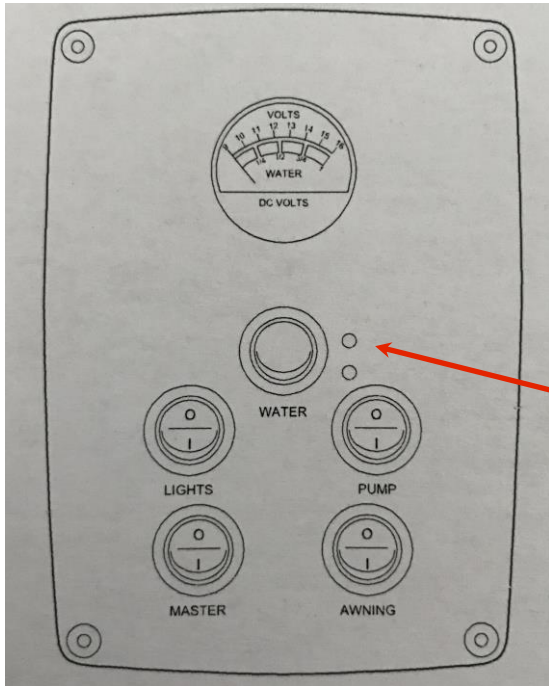

Each switch is clearly marked to identify what it operates.
 In order for any of the electrics in the motorhome to operate from the auxiliary battery, the **Master** switch must be on.
 The **Lights** switch operates main lounge area lights.
 The **Pump** switch must be on in order for any of the taps/shower to work.
Awning switch operates outside awning light.

The **green LED** light will illuminate when the pump is running.
 The **red LED** light will illuminate when the waste tank is full.

The heating and hot water are operated on the same panel. (To operate on electric only, they must be connected to a suitable 230V supply).

| Space Heater | | Water Heater | |
|--------------|--------------------|--------------|------------------|
| Symbol | Function | Symbol | Function |
| | Off | | Off |
| | 500W (Low) | | 750W (Med) |
| | 1000 (Med) | | 1500W (High) |
| | 2000W (High) | | Gas On |
| | Gas On | | 750W + Gas |
| | 2000W + Gas | | 1500W + Gas |
| | Frost Protection | | Frost Protection |
| | Night Time Setting | | |

Press the **Space Heater Function key** until you reach the desired setting, whether you are connected to an electric supply or just running off the gas.

To adjust the temperature, press the + and - symbols.

The Space heater will automatically turn itself on and off to maintain the desired temperature.

The night time setting maintains a temperature of 15'C using a low power setting.

Press the **Water Heater Function key** until you reach the desired setting, whether you are connected to an electric supply or just running off the gas. It takes 30 to 60 minutes to get to full temperature depending on what setting it's on.

Please note, the water gets very hot!