

Warning

All pans should be mounted centrally over the burners, even when cooling to protect adjacent walls. Glass lids may shatter when heated, turn off all burners and grill and allow to cool before shutting the lid. Please provide additional ventilation when cooking, i.e. open the window and use the extraction fan otherwise the smoke alarm may go off!



Gas Hob

Turn individual knob and use ignition button to light. There is one electric ring. This will only work if you have a 230V electric connection.


Gas Grill

Turn the grill control to high and with the knob depressed, light the burner using the ignitor.

Gas Oven

Turn the gas oven control to maximum then depress the knob, light the burner using the ignitor.

The ignitor switch only works if the master switch is on

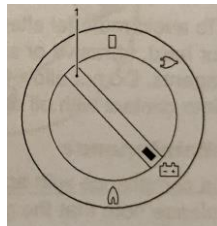

The fridge is equipped to operate on 3 power modes:

Mains (230V), Direct current voltage (12 DC) and gas.

Select the desired setting for mains, gas or battery (please note, only use battery setting whilst travelling otherwise the fridge will not stay cold!)



Gas operation

Press the temperature selector and and push the ignition lighter button and keep it depressed until you can see it has been lit and the green window appears.

The microwave will only work with a 230V mains hookup.

All cooking equipment and the kitchen area must be returned clean otherwise a cleaning fee will incur.