

Toilet Information

The toilet must be returned clean and the cassette must be emptied and washed out otherwise a £100 cleaning fee will be deducted from your security deposit.



Important that this is locked like this so the latch works correctly in the toilet, also to prevent any leaks when you carry the full cassette!

Remove when the toilet latch is **closed**.



Vent button



1. Remove the cassette from the outdoor hatch by lifting and pulling the orange handle. When returning, make sure the handle clicks into place to secure it.

2&3. Open spout and unscrew the end cap.

Whilst you empty the contents into the disposal area press the orange button (vent plunger). This helps prevent splashing! **It should only be pressed once the emptying spout is pointing downwards otherwise it will be you that is splashed!**

After emptying, rinse the tank and blade thoroughly and return to the original position.



When you receive the motorhome, there will be blue liquid in the cassette. This helps break down solids and keeps it smelling nice and fresh.

If you need to empty the cassette for further use during your stay, place **one blue tablet** into the cassette after you have emptied and rinsed it. These can be found in a tub in the bathroom cabinet.

If you have emptied and washed it ready for return, you do not need to place a blue tablet inside as we will do this at the depot before it goes out next.

Please use the **Pink spray** in the bathroom cabinet to wash the inside of the toilet. It is not safe to use anywhere else, only for the inside of the toilet.



Toilet hatch must be closed before you remove the cassette. Open before you use the toilet!