


## TV Info

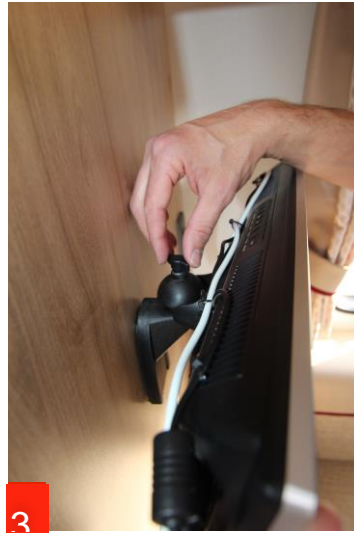

The TV must not be left on it's mount whilst travelling as this will damage it. Please store it carefully in the cupboard.

- 1 & 2. Insert TV onto mount, it should easily slide on.
3. Lock into place.
4. Plug power and aerial in.

5. When you turn the TV on, it will need to be tuned in for each location. Press and hold the red button and it will automatically search and set up channels.

When not in use, turn the TV off by the switch at the bottom of the TV, this saves using any unnecessary power.

